


3311

Pre-Amp 7 Band Graphic Equalizer with Subwoofer Output

DIN INPUT

Type 3

 - 1 — Open
- 2 — Signal Ground
- 3 — Remote - On
- 4 — Right +
- 5 — Left +
- 6 — Battery Constant (Out)
- 7 — Ignition (Out)
- 8 — Power Supply Ground

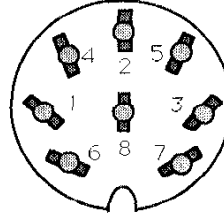

DIN OUT-Front


Type 3

DIN OUT-Rear


Type 3

DIN OUT- Sub

Type 3

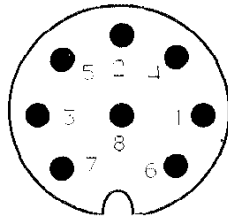

- 1 — Open
- 2 — Signal Ground
- 3 — Remote-On
- 4 — Right +
- 5 — Left +
- 6 — Battery Constant (In)
- 7 — Ignition (In)
- 8 — Power Supply Ground

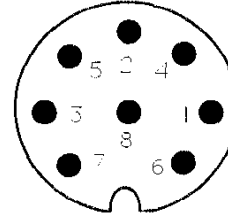

Note: The unit is powered thru it's **DIN Cable Output(s)**, Ignition , Battery and Power Supply Ground are required. Remote-On is provided thru the unit's Input DIN connector from the source feeding