

Security System w/ Remote Starting

Standard Features: The Omega MAX-E has it all! Incredibly fully-featured vehicle security with remote engine starting convenience. The MAX-E uses a window-mounted standard receiver module to ensure great operating range, and is also plug-in upgradable for the Echo-2 2-way pager/controller system. The MAX-E includes Omega's standard 5 and 8 pin harnesses, primary and secondary remote start harnesses, LED-CP-2 micro plug Red & Green Status Indicator Light, 22LC plug-in Valet Switch, and Omega's patented Psycho Siren. This unit has 4 remote start relays, flashing parking light and dome light relays all built-in, (-) negative doorlock outputs, including driver door priority option, with basic harness. Now with Manual Transmission Remote Starting and Turbo Timer features. The MAX-E features patented Easy Valet and Selectable Coded Override operation.

Two Transmitters included: 2 Black 4-Button Transmitters with soft-touch pictograph buttons. 433 MHz, code-jumping.

Operations: Lock Button - Press and release to Arm/Lock. Press and hold to activate Remote Panic with locking doors.

Unlock Button - Press and release to Disarm/Unlock. Press and hold to activate Remote Panic with unlocking the doors.

Remote Starting - Press and hold **Lock** and **Unlock** together.

"II" Button - Press and hold to activate trunk release. Press and release twice to arm/lock - disarm/unlock without confirmation chirps.

"III" - Press and hold to activate remote panic, or change to 3rd Channel.

How to Code the Transmitters: Turn "on" the ignition, then press the valet switch 5 times and wait for siren confirmation of entry into programming mode. Press and release the Option transmitter button on each remote to be coded (one at a time). The system will respond to each with an audible confirmation.

Omega part #s

146-07B (black / gray)

146-07G (smoke tint / green glow)



And, the
MAX-E is



36 Programmable Features

FEATURE#

Feature #1	Selectable Code Override
Feature #2	Last Door Arming
Feature #3	Automatic Rearming
Feature #4	Starter Interrupt Circuit
Feature #5	Automatic Starter Interrupt
Feature #6	Ignition Activated Override
Feature #7	Doors Lock With Last Door Arming
Feature #8	Doors Lock With Automatic Rearming
Feature #9	Doors Lock With Ignition
Feature #10	Ignition OFF Unlock #1
Feature #11	Ignition OFF Unlock #2
Feature #12	Open Door Bypass To Previous Three Features
Feature #13	Confirmation Chirps
Feature #14	Confirmation Chirps In Valet Mode
Feature #15	Activated Alarm Cycle
Feature #16	Lights On Upon Disarm
Feature #17	Disarm Alarm Upon Trunk Release
Feature #18	Doorlock Pulse Time
Feature #19	Double Unlock Pulse
Feature #20	Arming Delay
Feature #21	Pulsed Horn / Steady Siren Output
Feature #22	Horn Confirmation Chirp Volume
Feature #23	Total Closure Lock Output
Feature #24	Alarm Functions Bypass
Feature #25	Ignition Activated Anti-Carjacking Protection
Feature #26	Door Activated Anti-Carjacking Protection
Feature #27	Remote Activated Anti-Carjacking Protection

DEFAULT

LOCK

UNLOCK

1 & 0 switch presses (manual program)		
OFF	ON	OFF
OFF	ON	OFF
ON	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
ON	ON	OFF
ON	ON	OFF
ON	ON	OFF
ON	ON	OFF
ON	ON	OFF
OFF	ON	OFF
60 Seconds	60 Seconds	30 Seconds
ON	ON	OFF
ON	ON	OFF
.8 Second	.8 Second	3 Seconds
OFF	ON	OFF
3 Seconds	3 Seconds	45 Seconds
Steady Siren	Pulsed Horn	Steady siren
Medium Loud -	all 4 buttons used; 4 chirp levels	
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF
OFF	ON	OFF

- Feature #28 Open Door Warning Upon Arming
- Feature #29 Ill Button Operates "Panic" or 3rd Channel Output
- Feature #30 Remote Start Run Time 10 or 20 Minutes
- Feature #31 Steady / Flashing Lights During Remote Start
- Feature #32 Gasoline or Diesel Engine
- Feature #33 Extended Starter Cranking Time
- Feature #34 "Tach Wire" or "Tachless" Starter Operation
- Feature #35 Manual Transmission Remote Starting
- Feature #36 Turbo Timer

OFF	ON	OFF
Panic	Panic	3rd Channel
10 Minutes	20 Minutes	10 minutes
Steady	Steady	Flashing
Gasoline	Gasoline	Diesel
Minimum- all 4 buttons used; 4 cranking times		
"Tachless"	"Tachless"	"Tach Wire"
OFF	ON	OFF
OFF	ON	OFF

How to Program the Features:

- Step #1:** Turn off the ignition.
- Step #2:** Press the valet switch 5 times, wait for audible response, and then select the feature by pressing the valet button a number of times equal to the feature number.
- Step #3:** Press the **Lock** or **Unlock** transmitter button to configure the feature as desired.
- Step #4:** Repeat pressing the valet switch to access the next feature, and then again press the **Lock** or **Unlock** button to configure the selected feature.

Smart Trigger: The Smart Trigger utilizes the Domelight Supervision circuit for the alarm's open door trigger input- simply program the polarity with the Smart Trigger jumper.

Omega MAX-E Wiring Diagram Overview

