

# AL-1000 ATV

REMOTES: 3 Button/Green LED 433MHz Omega Part #103-03 Board # ET4E

## REMOTE OPERATION:

**Large center button:** Arm/Disarm and activate panic.

**Small right button:** Hold for 3 seconds to activate 2<sup>nd</sup> channel output. Press and release within 3 seconds after arming to Arm without confirmation chirps. Press and release before disarming to disarm without confirmation chirps.

**Small left button:** Hold for 3 seconds to activate 3<sup>rd</sup> channel and also 1 button press within 4 seconds of Arming will bypass sensor.

CODING REMOTES: Step 1- Turn “on” the ignition. Step 2- Press valet button 5 times and wait for a siren chirp.

Step 3 – Press button desired to Arm system (other buttons program automatically)

## NOTES

- 1) Unit has 4-pin door lock plug with driver door priority.
- 2) Unit has 2 4-pin auxiliary.
- 3) Unit was manufactured with both (-) negative and (+) positive siren output depending on production run. Refer to original manual for specific information on this.
- 4) Unit has pulsed or steady siren output.
- 5) Unit has built in dome light supervision relay.
- 6) Unit comes packaged with starter interrupt socket and relay.
- 7) Unit comes packaged with shock sensor.
- 8) Unit has Pager Port.

## Programmable Features

Turn ignition “on” then “off”- Press valet button 5 times and wait for response chirp- Press valet button equal to the feature # you wish to change— Pressing Large center button turns feature “on”— Pressing small left button turns feature “off”

<b>FEATURE#</b>	<b>DEFAULT</b>	<b>CENTER BUTTON</b>	<b>LEFT BUTTON</b>
Feature#1 Ignition Activated Anti-Carjacking	OFF	ON	OFF
Feature#2 Door Activated Anti-Carjacking	OFF	ON	OFF
Feature#3 Last Door Arming	ON	ON	OFF
Feature#4 Doors Lock With Last Door Arming	ON	ON	OFF
Feature#5 Current Sensing	ON	ON	OFF
Feature#6 Doors Lock At Ignition “On”	ON	ON	OFF
Feature#7 Doors Unlock At Ignition “Off”	ON	ON	OFF
Feature#8 Driver Door Unlock At Ignition “Off”	OFF	ON	OFF
Feature#9 Open Door Bypass To Features #6, #7, #8	ON	ON	OFF
Feature#10 Lights On 5/30 Sec. Upon Disarm	30 sec.	30 sec.	5 sec.
Feature#11 Automatic Rearming	ON	ON	OFF
Feature#12 2 <sup>nd</sup> Channel Output Disarms System	ON	ON	OFF
Feature#13 .8/3 Second Doorlock Pulse	.8 sec.	.8 sec.	3 sec.
Feature#14 Double Unlock Pulse	OFF	ON	OFF
Feature#15 3/45 Second Arming Delay	3 sec.	3 sec.	45 sec.
Feature#16 Confirmation Chirp	ON	ON	OFF
Feature#17 30/60 Second Activated Alarm Cycle	60 sec.	60 sec.	30 sec.
Feature#18 Pulsed Horn / Steady Siren Output	Either	Steady	Pulsed
Feature#19 Loud / Soft Confirmation Chirps	Loud	Loud	Soft
Feature#20 Total Closure Lock Output	OFF	ON	OFF
Feature#21 Remote-Activated Anti-Carjacking	OFF	ON	OFF

## Total System Reset

Must be reset at the factory.

## WIRING DIAGRAM FOR AL-700 ATV / AL-900 ATV / AL-1000 ATV

