

WIRING DIAGRAMS

Fig. 1: Engine Compartment, Alternator, Headlights (Grid 1-3)
1997 Audi 80

Copyright © 1998 Mitchell Repair Information Company, LLC
Monday, April 10, 2006 11:08AM

COMPONENT LOCATOR:

A/C CONTROL UNIT	E 19
A/C SELECT SW	E 16
A/T CONTROL UNIT	A 9-10
A/T RELAY	B-C 8
A/T SHIFT LEVER LT	C 11
ABS COMBINATION RELAY	B 12
ABS CONTROL UNIT	A 13-14
ABS SW	C 12
AIRBAG SYSTEM	A-B 19-19
ALTERNATOR	B 5
ANTI-THEFT ALARM CONTROL UNIT	B-C 32
AUTO-SHIFT LOCK CONTROL UNIT	D 8
BATTERY	A 2
BLOWER SW	E 17
CENTRAL LOCKS	E 33-34
COMBINAT ON SW	A 20-22
CRUISE CONTROL SYSTEM	A-5 2-7
DEFOGGER SW	A 38
DOOR LOCK HEATERS	B 37-38
DOOR SWs	D 38
ELECTRONIC THERMO SW	A 26
ENGINE COMPT LT	D 2
FRONT FOG LT SW	E 20
FRONT LIGHT CONTROL UNIT	C 3
FUEL INJECTION CONTROL UNIT	B-D 4
FUSE #25	B 17
FUSE #27	E 6
FUSE #28	E 4
FUSE #30	A 11
FUSE/RELAY PANEL	B-D 18-26
GEAR SELECT DISPLAY	D 11
GEAR SELECT SW	D 11
GLOVE COMPT LT	C 38
HAZARD FLASHER	A 22-23
HATED SEATS	A-C 27
IGNITION COIL ASSY	E 7
IGNITION CONTROL UNIT	B-D 7
IGNITION SW	A 16-17
INSTRUMENT CLUSTER	A-E 30-31/A-B 34-35
INSTRUMENT PANEL LTS BOOSTER	E 32
INTERIOR LIGHTS	C-E 34-35
LIGHT SW	E 22-23
OIL PRES CONTROL UNIT	B 29
POWER MIRRORS	A-B 36-37
POWER WINDOWS/SUNROOF CONTROL UNIT	E 37
POWER WINDOWS	C-E 38-39
RAD COOL FAN THERMO SWs	D 18
REAR FOG LT SW	E 21
REAR LIGHT CONTROL UNIT	B 35
SEAT BELT WARNING RELAY	B-C 35
SPEEDOMETER SENDER	D 28
STARTER	A 2-3
STOP LT SW	A 15
SUNROOF	D-E 26-27
WASHER FLUID LEVEL SW	A 20
WIPER MOTOR	E 3

