


## Oldsmobile Alero & Pontiac Grand Am 2001 & up Body control module



### Body Control Module

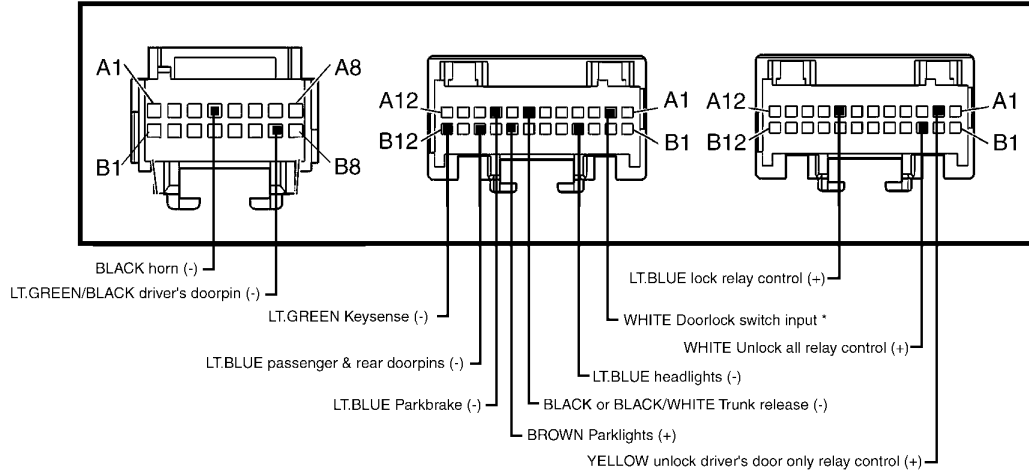

The BCM is located directly above the passenger side footwell. Remove the under-panel to expose the module.

\* This wire uses resistor for lock and unlock (see doorlock diagram). You can also use the relay control wires with a positive trigger for locks. The YELLOW wire at pin-A1 on the far right connector unlocks the driver's door only.

**NOTE:** The information on this sheet is provided on an "as is" basis with no representation or warranty of accuracy whatsoever. It is the sole responsibility of the installer to check and verify any circuit before connecting to it. Only a computer safe logic probe or digital multimeter should be used. Wiremagic.com Corp. assumes absolutely no liability or responsibility whatsoever pertaining to the accuracy or currency of the information supplied. The installation in every case is the sole responsibility of the installer performing the work and Wiremagic.com Corp. assumes no liability or responsibility whatsoever resulting from any type of installation, whether performed properly, improperly or any other way. The information supplied is a guide only.