



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

NISSAN

MOD.

PRIMERA

YEAR

97 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the shock absorber pillar on the driver's side.

POWER SUPPLY

+30: connect to the 4 mm² RED wire in the general supply wiring of the fuse box.
- 31: connect with a cable-end connector to one of the ground terminals behind the left lateral bulkhead on the driver's side.

IGNITION WIRE

+15/54: connect to the 2 mm² RED wire with WHITE references that comes out of the 6 way connector, behind the fuse box

DIRECTION INDICATORS

Connect to the 1 mm² GREEN/YELLOW wire with SILVER references and GREEN/BLACK wire with SILVER references in the wiring harness coming out of the 8 way brown connector, next to the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the WHITE/RED wire inside the driver's door.

Front window, passenger's side:

cut the 2 mm² GREEN wire that comes out of the driver's door.

Rear window, driver's side:

cut the 2 mm² GREEN/BLACK wire that comes out of the door.

Rear window, passenger's side:

cut the 2 mm² GREEN/BLACK wire that comes out of the door.

These wires are located in the wiring harness coming out of the respective switch.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the 1 mm² LIGHT GREEN/RED wire with a GREY dash (lock) and to the ORANGE wire with a GREY dash (unlock) located in the wiring harness that comes out of the central locking unit, behind the left panel, driver's side.

IMMOBILISATION POINT

Fuel pump relay

Cut the 0,5 mm² BLACK/WHITE wire with SILVER references located in the wiring harness that comes out of the light blue fuel pump relay, on the right, in the fuse box.

Fuel pump control

Cut the 1,5 mm² BLACK/YELLOW wire with SILVER references in the light blue fuel pump relay, on the right, in the fuse box.

STARTER

+50: Cut the 1,5 mm² WHITE/GREEN wire in the wiring harness that comes out of the ignition switch.

BONNET SWITCH

Install an additional switch on the headlight support plate, near the bonnet bumper rubber on the driver's side.

DOORS SWITCH

Connect to the 1 mm² RED/WHITE wire with SILVER references in the wiring harness that comes out of the 12 way white connector of the central locking unit located behind the lateral panel of the driver's side, near the bonnet release lever.

BOOT SWITCH

Connect to the 1 mm² RED/SILVER wire located in the connector that comes out of the boot's interior lamp.