



## Nissan Sentra 2000 & up – SECU

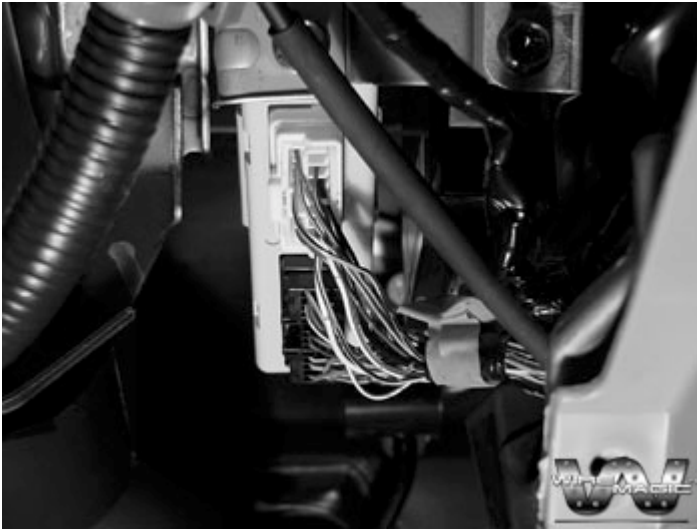

The SECU module is located under the driver's side of the dash on the right side of the steering column. The doorlocks, security wires, as well as the doorpins and trunk-pin can all be found here. The diagram and pin-locations in the diagram correspond to the view as shown in the picture above.

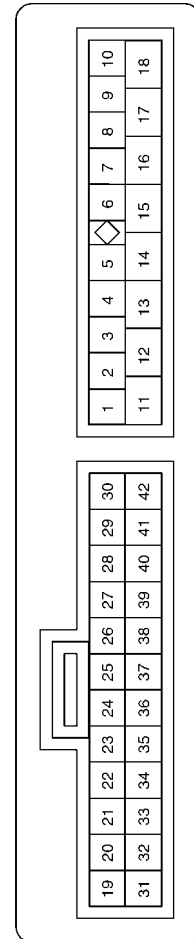

SECU (Smart Entrance Control Unit)

- Pin-13 **PINK/BLACK** – Driver's door unlock motor (+) *for keyless upgrade only*
- Pin-14 **WHITE/RED** – Passenger door unlock motor (+) *for keyless upgrade only*
- Pin-15 **RED/BLACK** – Door lock motor detect (+) *for keyless upgrade only*
- Pin-19 **WHITE/GREEN** – Horn (-)
- Pin-23 **GRAY** – Lock wire (-)
- Pin-27 **PINK/BLACK** – Hood switch (-)
- Pin-28 **RED/WHITE** – Door switches (-)
- Pin-30 **WHITE/BLUE** – Factory alarm disarm (-)
- Pin-32 **BLUE/WHITE** – Keysense (-)
- Pin-35 **PURPLE/RED** – Unlock wire (-)
- Pin-38 **RED/BLACK** – Trunk pin switch (-) *see note*
- Pin-41 **LT.GREEN/RED** – Factory alarm arm (-)

**NOTE:** The trunk pin wire does not always work. If it does not, the same RED/BLACK can be found directly at the light in the trunk compartment.

**NOTE:** The information on this sheet is provided on an "as is" basis with no representation or warranty of accuracy whatsoever. It is the sole responsibility of the installer to check and verify any circuit before connecting to it. Only a computer safe logic probe or digital multimeter should be used. Wiremagic.com Corp. assumes absolutely no liability or responsibility whatsoever pertaining to the accuracy or currency of the information supplied. The installation in every case is the sole responsibility of the installer performing the work and Wiremagic.com Corp. assumes no liability or responsibility whatsoever resulting from any type of installation, whether performed properly, improperly or any other way. The information supplied is a guide only.