


1993-1997 Nissan Altima
2000 Toyota Celica
2000 Toyota Echo

Accessory / Ignition Isolation

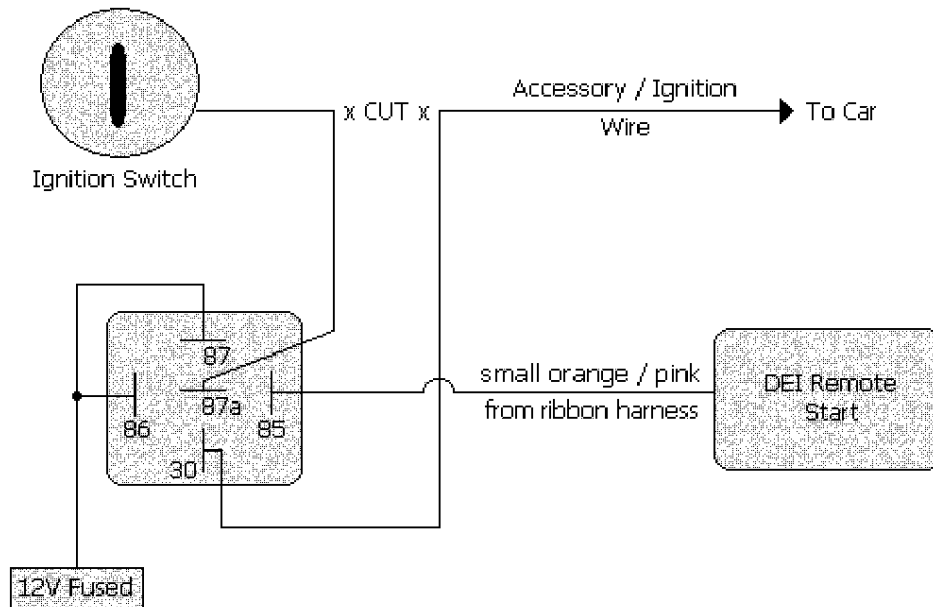

When installing a remote start in a 1993-1997 Nissan Altima, 2000 Toyota Celica, and the 2000 Toyota Echo, you need to isolate the accessory / ignition wire from the key switch. To do this you will need to add a wire to terminal 87a (center pin) of the accessory / ignition relay on the relay satellite pack. You may remove the terminal from another relay harness or just add a connector to the pin. Then you will need to cut the factory accessory / ignition wire in half and wire the key side of the wire to 87a (center pin) and the car side to 30 (large orange/pink wire). Refer to the Techsoft sheet to determine whether the accessory wire or the ignition wire needs to be isolated.