


# Wait to start light

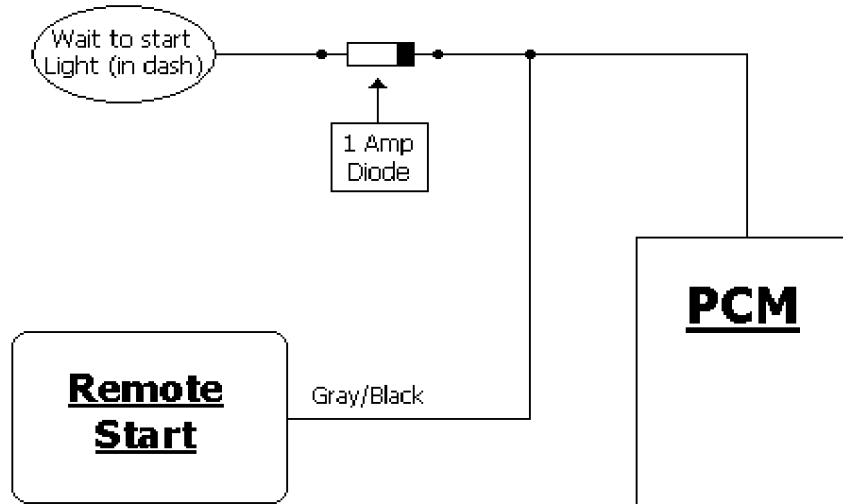

When tying in to the glow plug wire, install a 1 amp diode on the factory wire to prevent the wait to start light from backfeeding ground to the remote start.

**IMPORTANT:** This wiring information is being provided free of charge on an “as is” basis, without any representation or warranty. It is the dealer’s responsibility to verify any circuit before interfacing with it using a digital multi-meter. Directed Electronics Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case remains the responsibility of the installer. Directed Electronics Inc. assumes no liability or responsibility resulting from an improper installation, even in reliance of this information.